

201220 259T800T

100 →

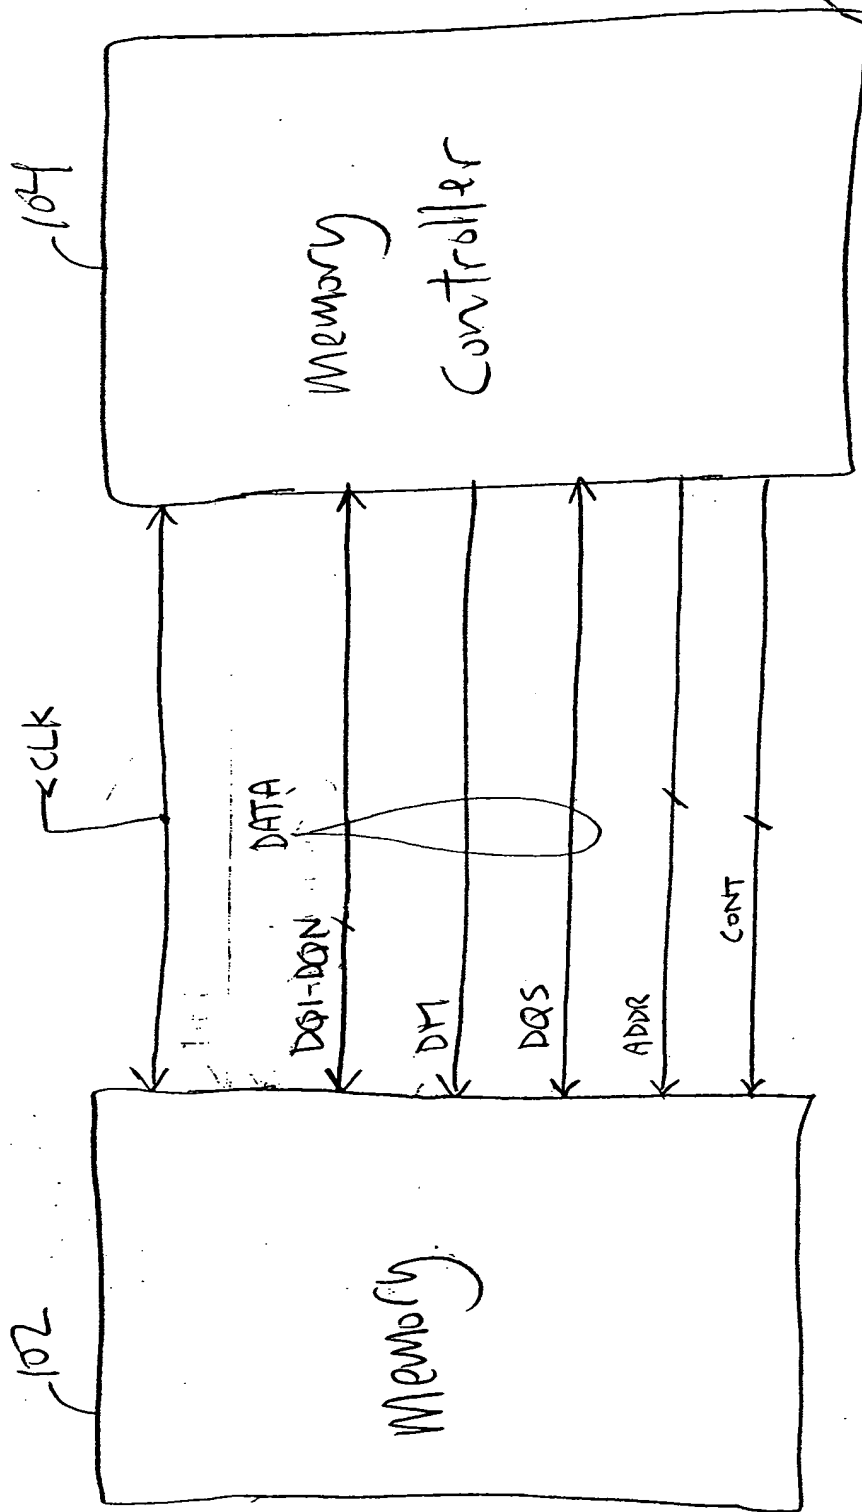


Figure 1
(Background Art)

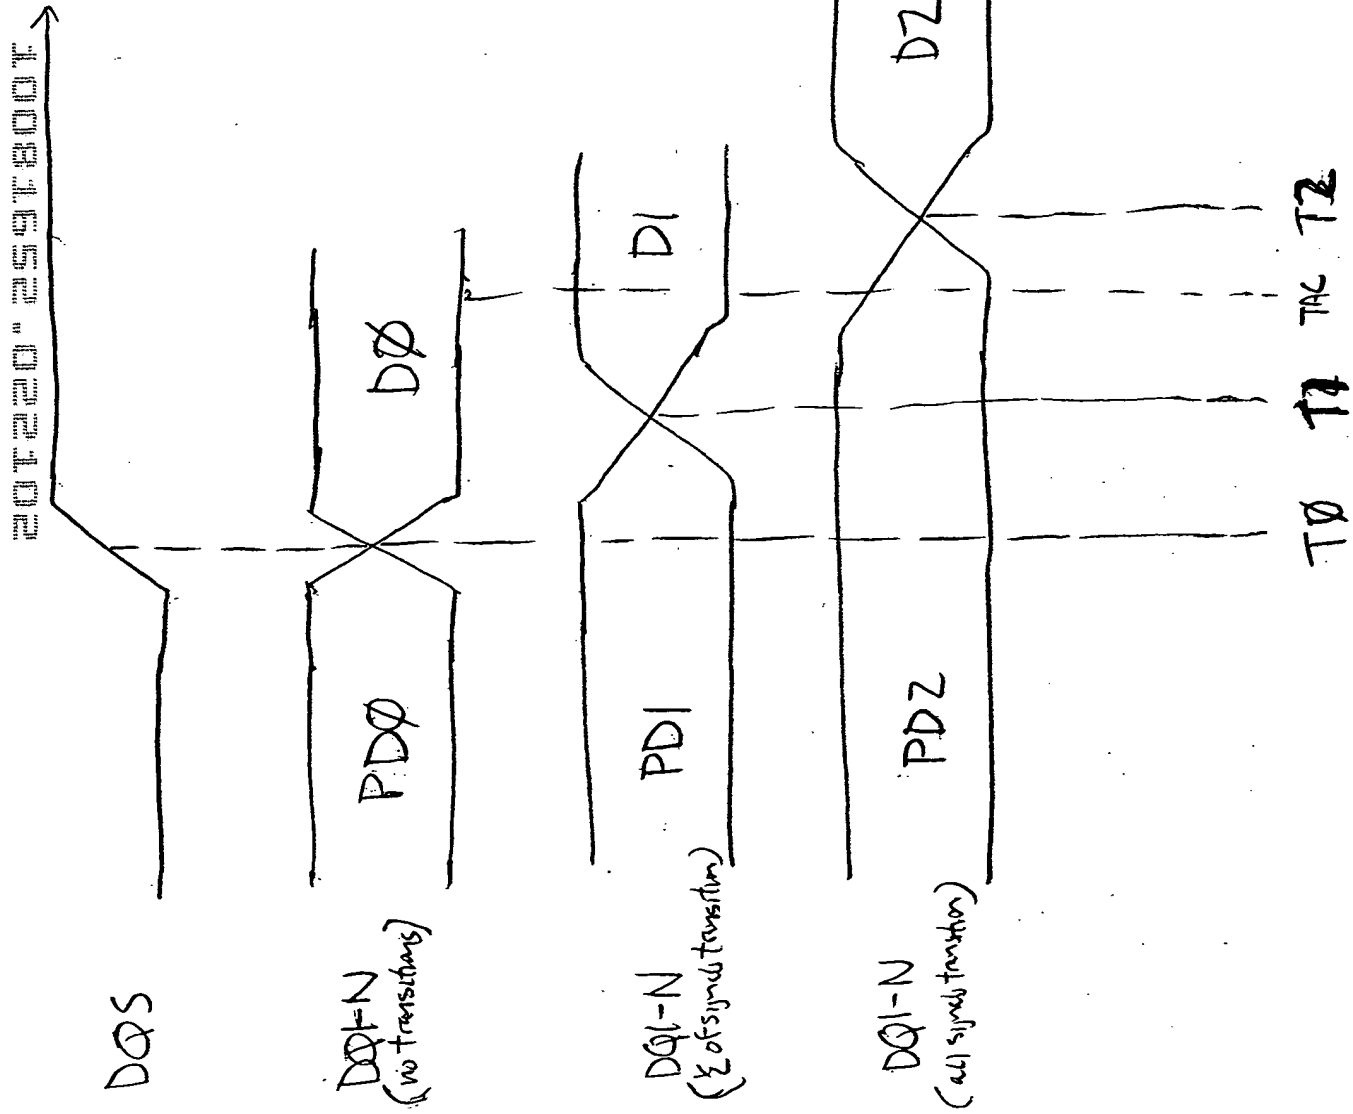


Figure 2 (Background Art)

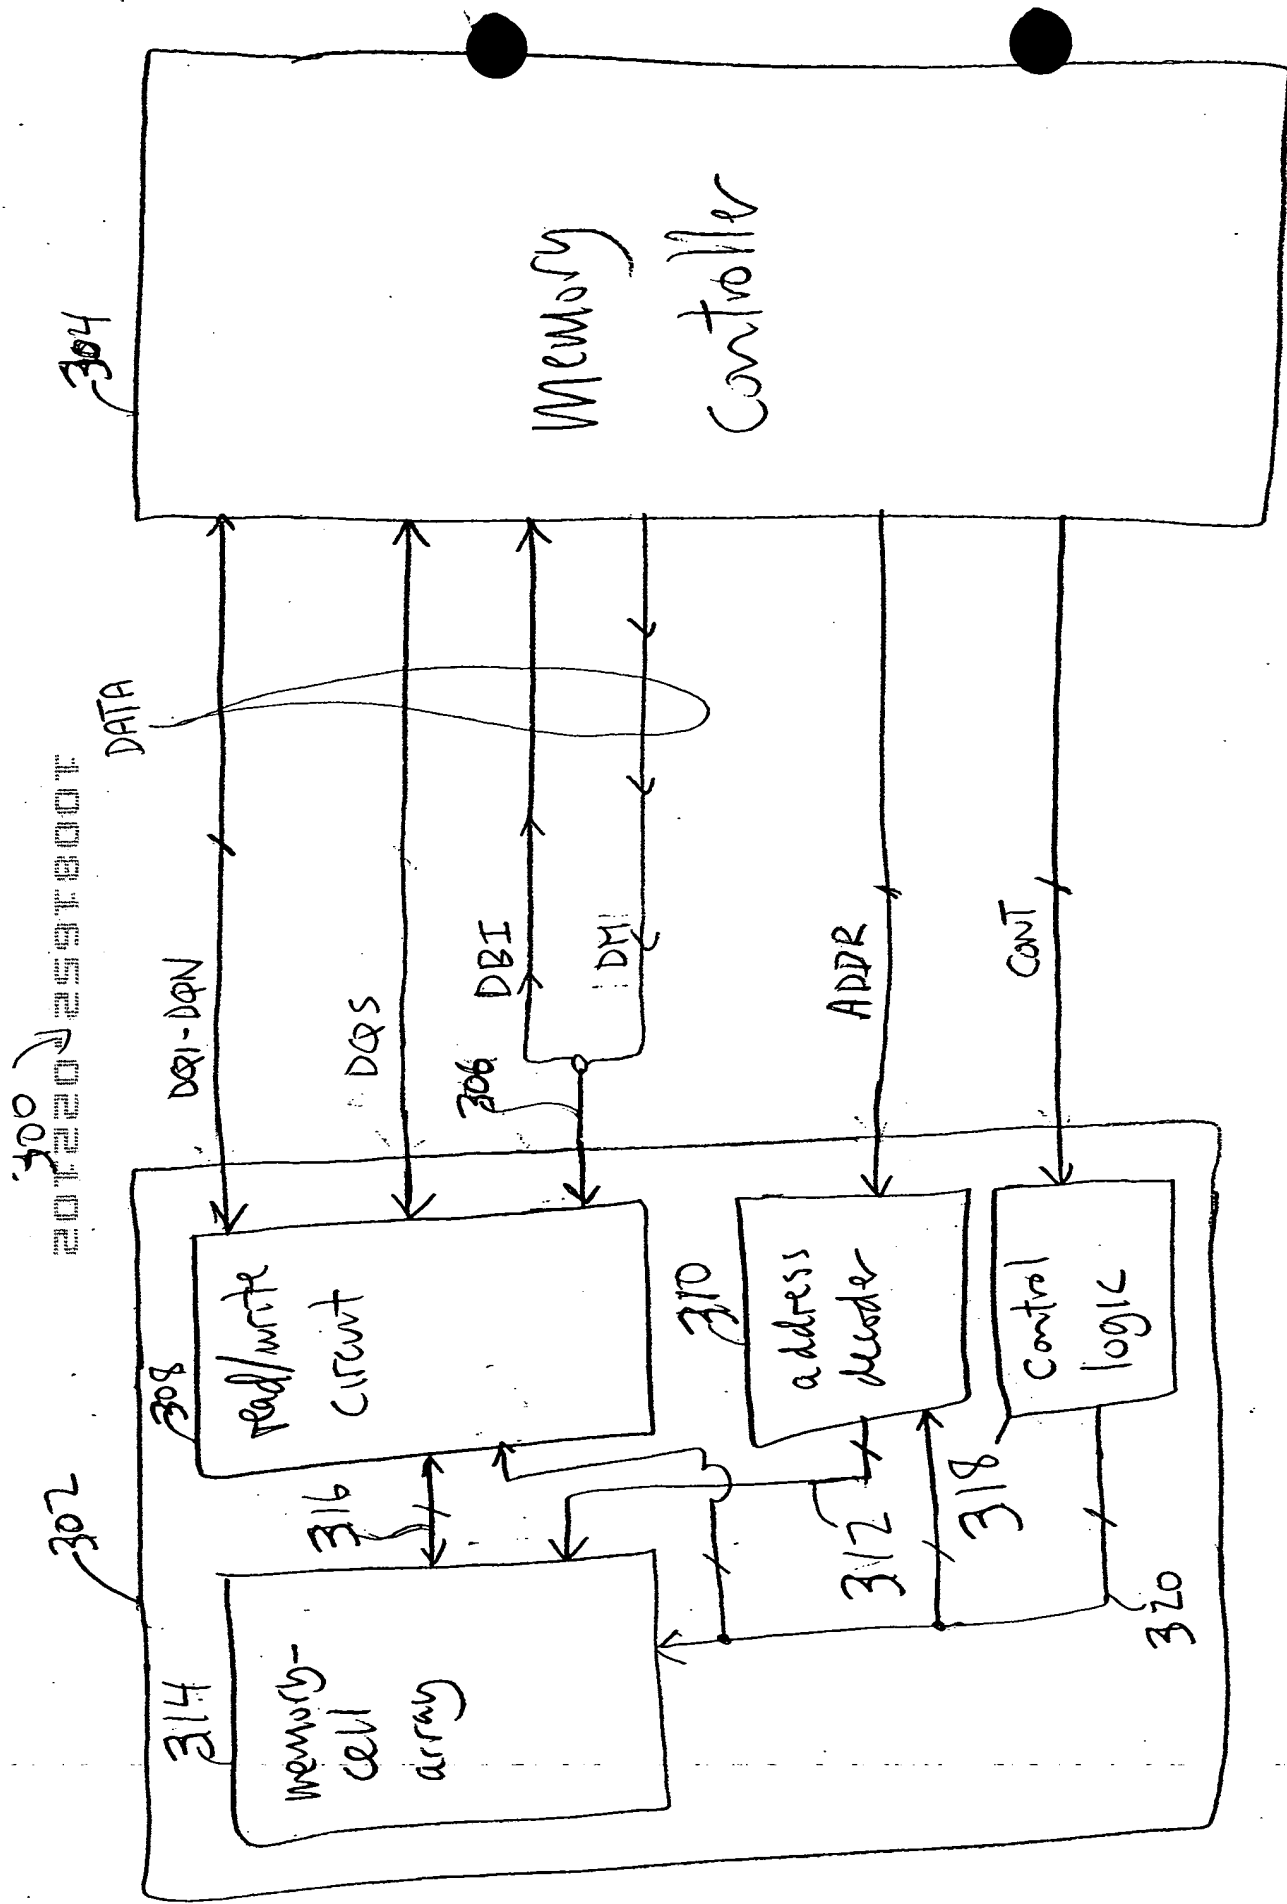


Figure 3

108

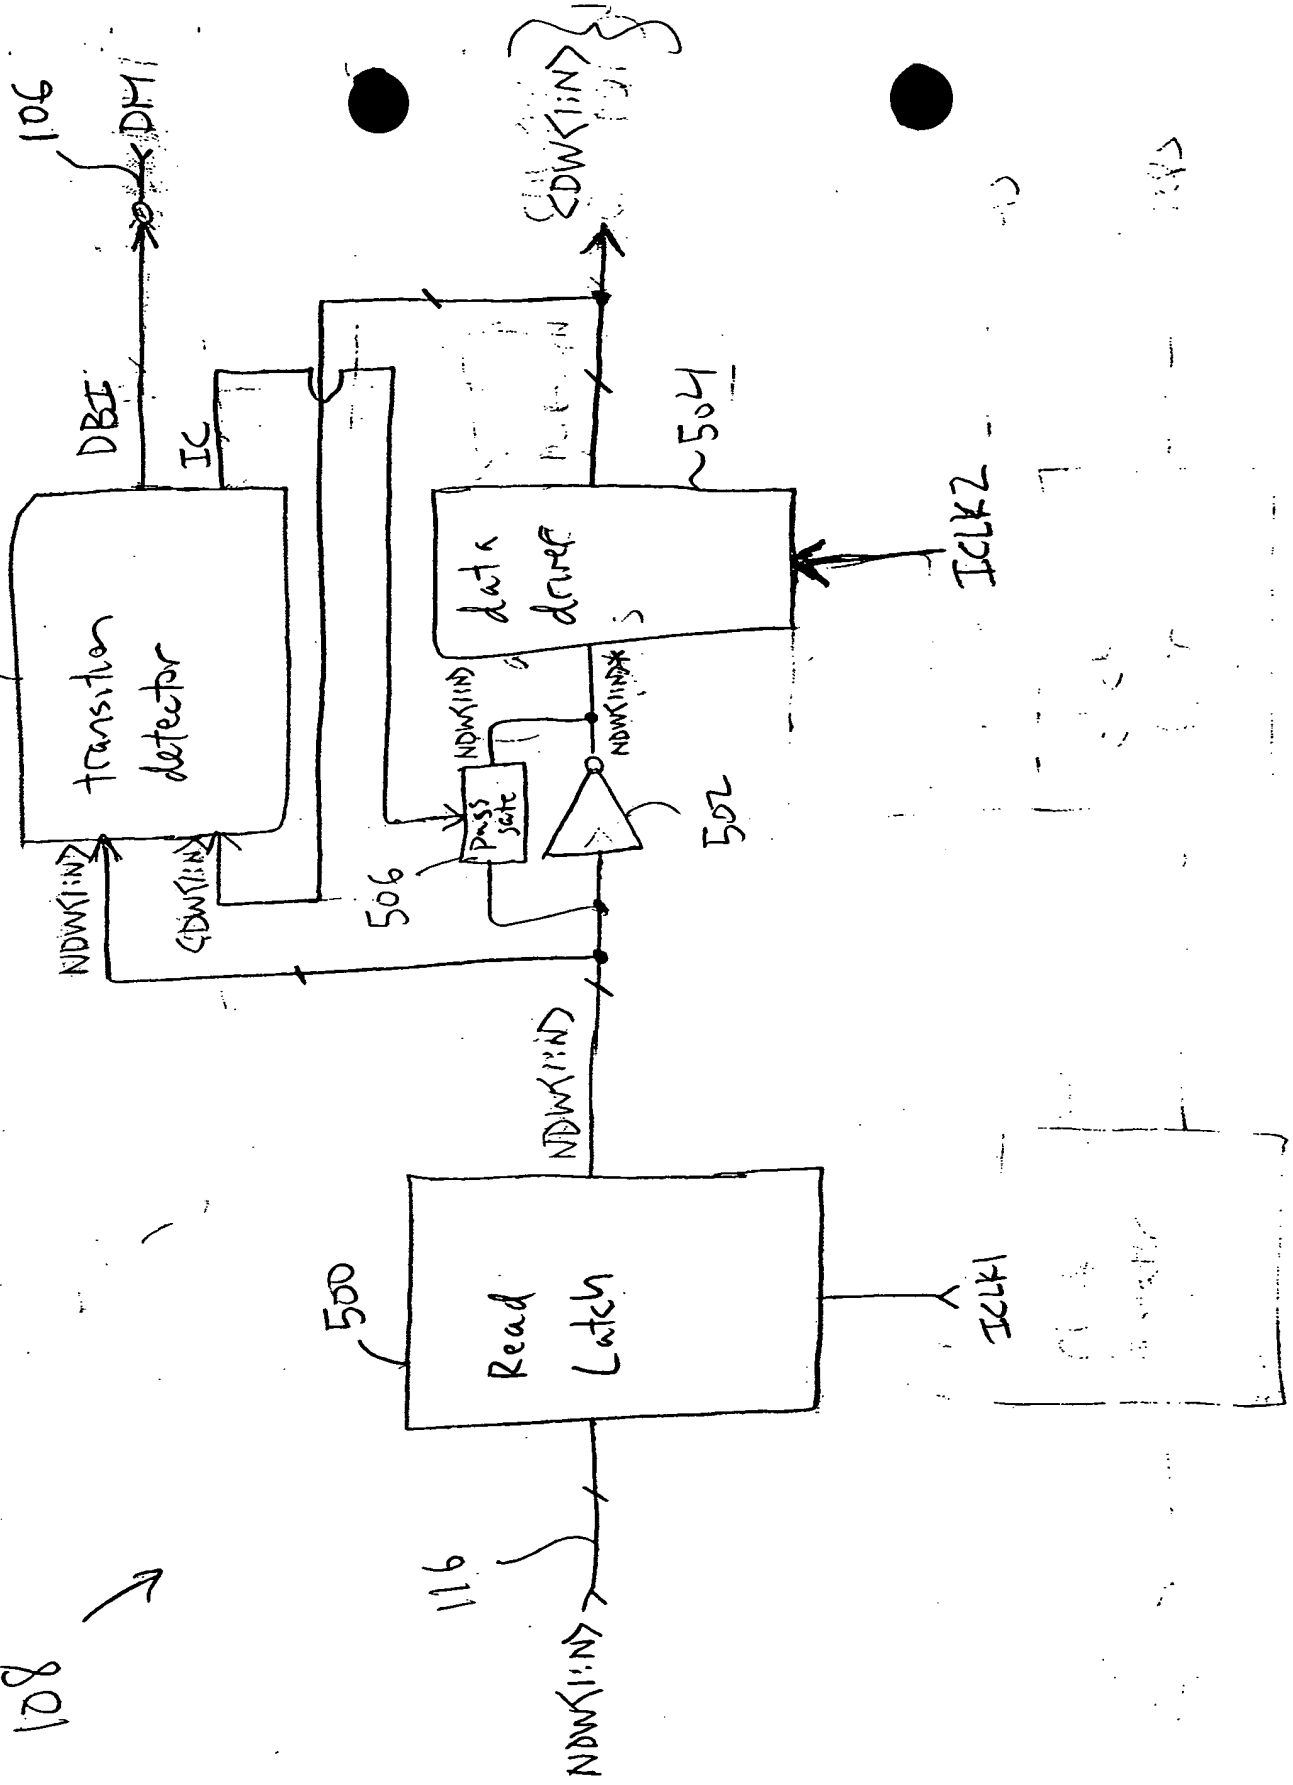


Figure 5

600

604

602

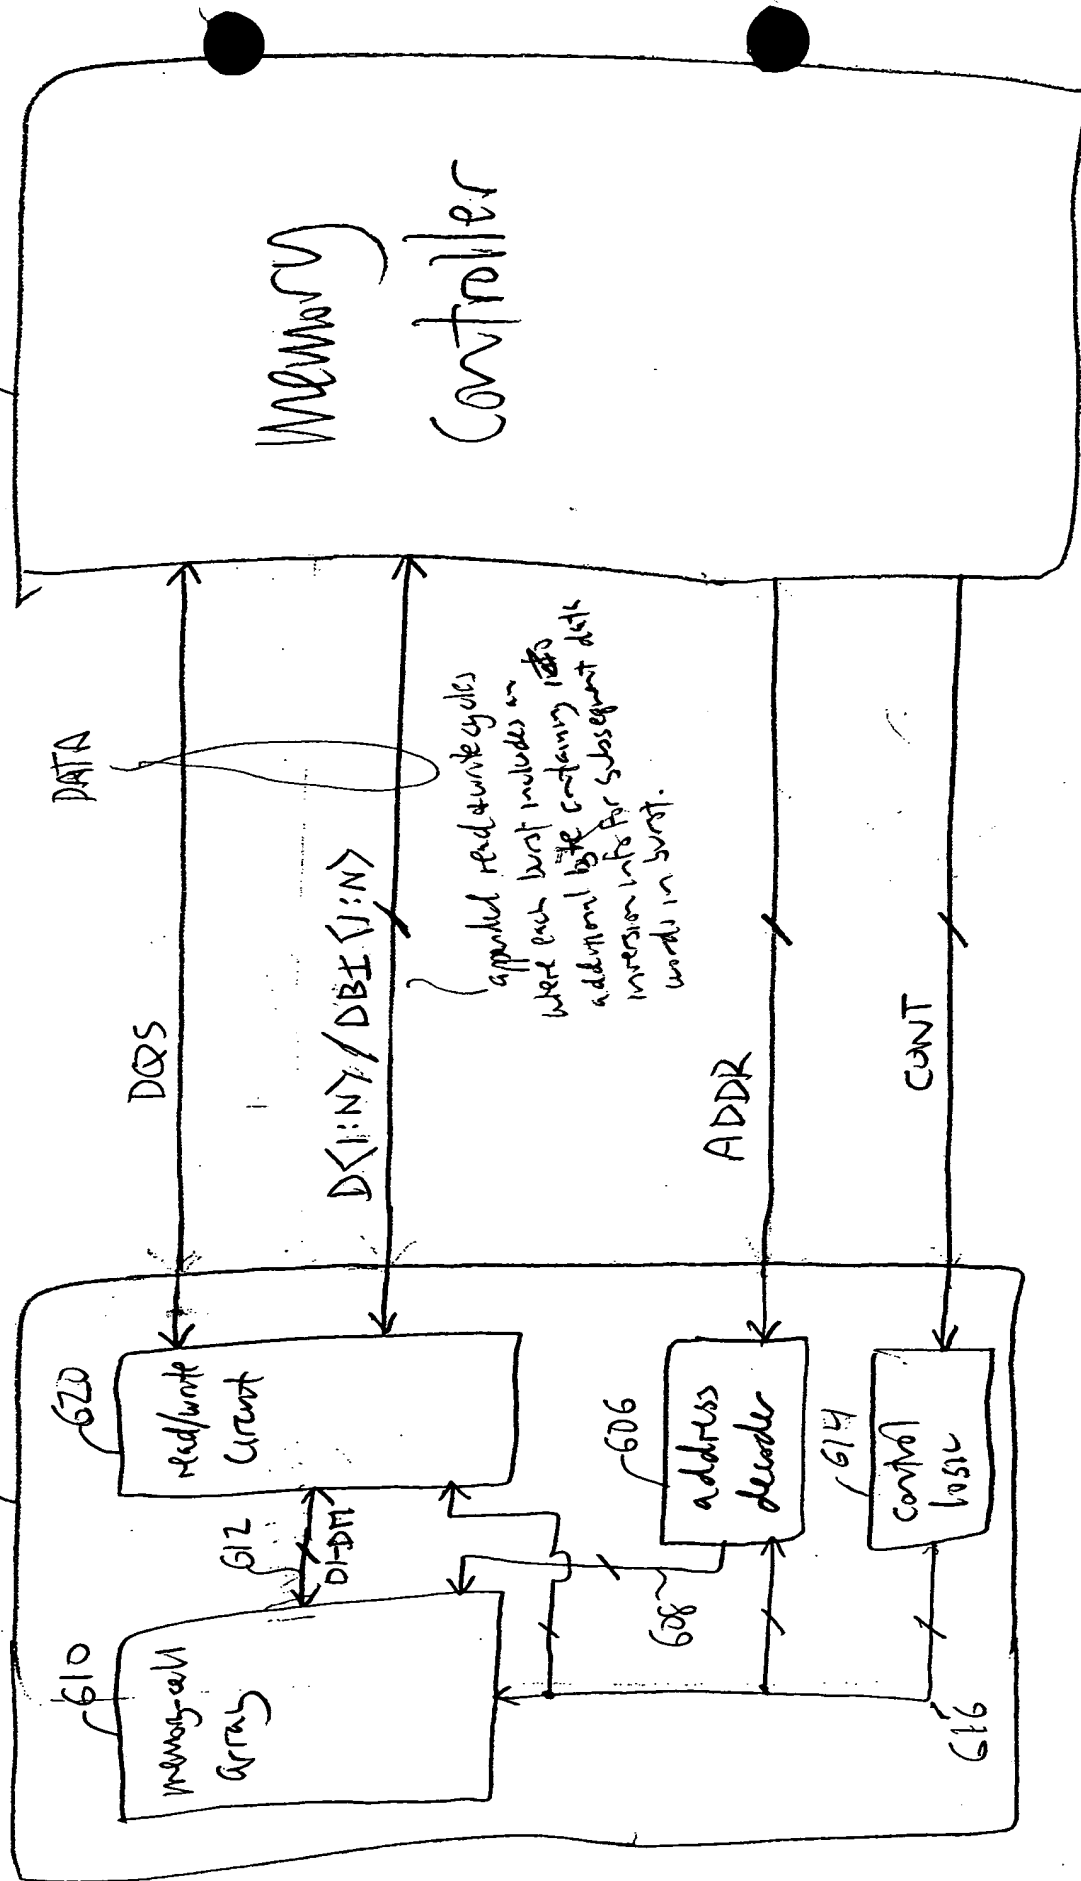


Figure 8

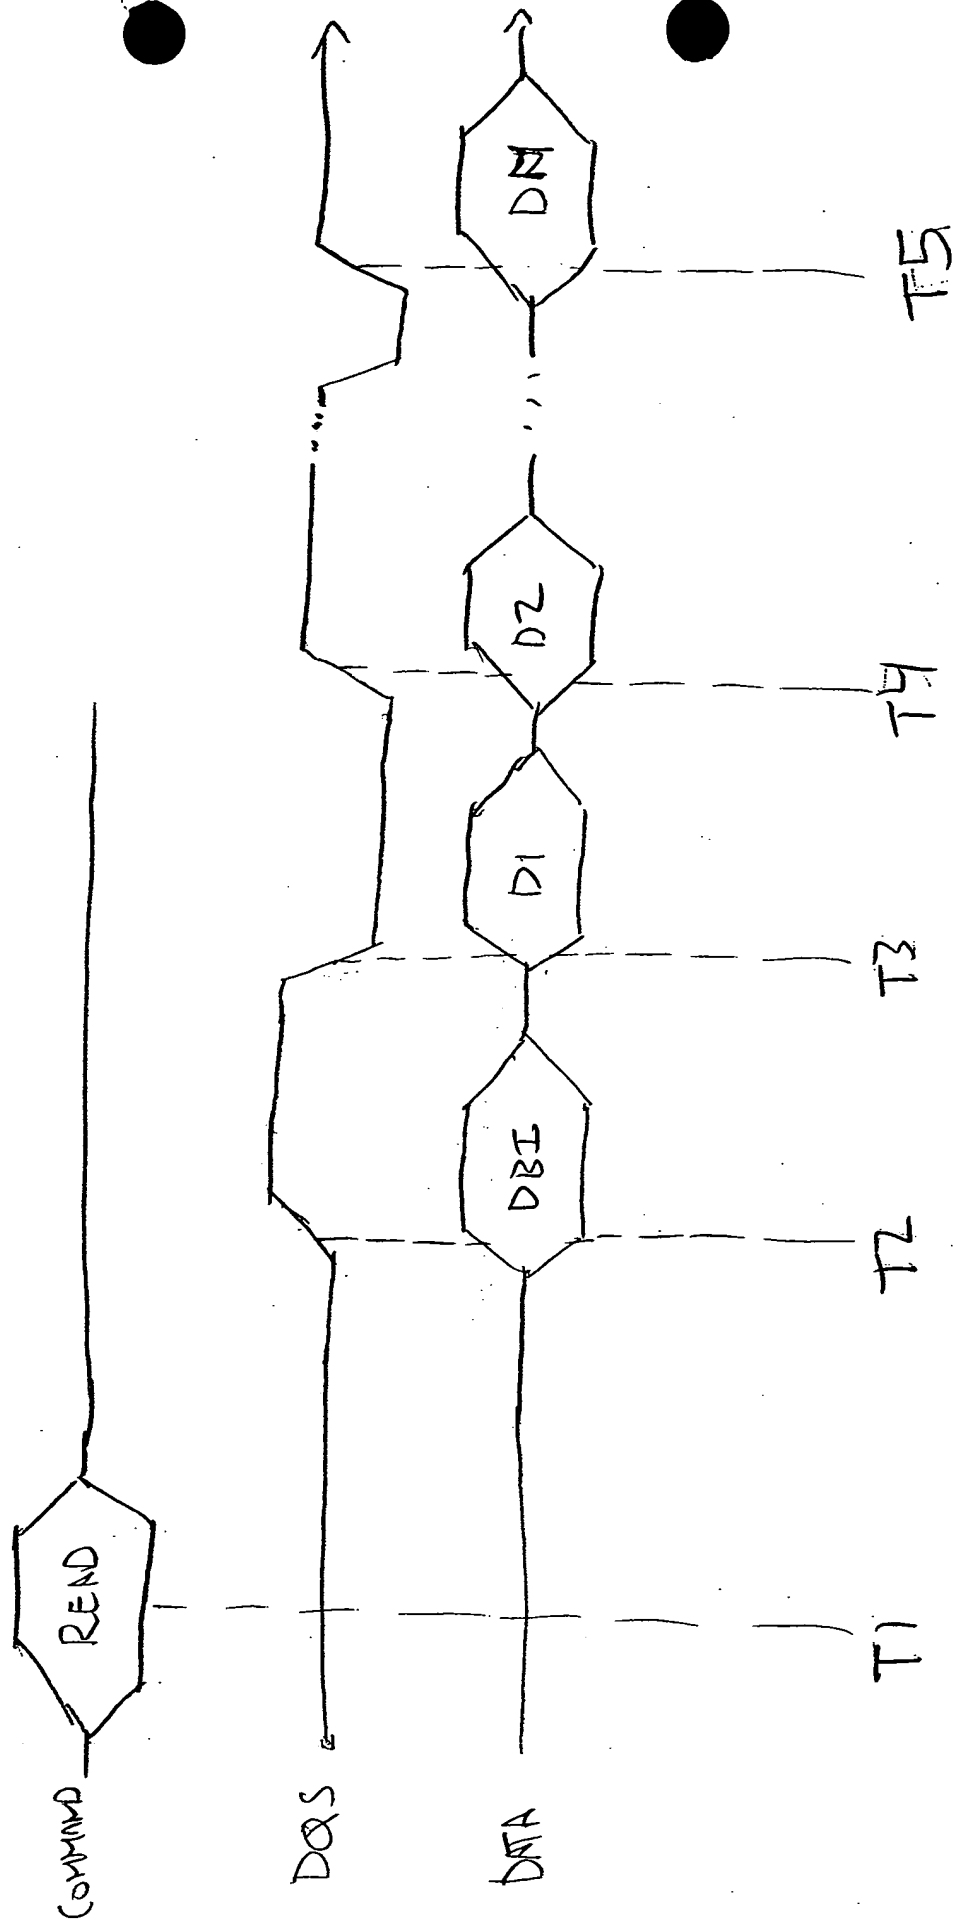


Figure 7

	<u>DBI</u>	<u>D1</u>	<u>D2</u>	<u>D3</u>	<u>D7</u>	<u>D8</u>
I1	0	1	0	1	1	0
I2	1	1	0	1	0	0
I3	1	1	0	1	1	0
I4	x	1	0	1	0	0
I5	x	1	0	1	1	0
I6	x	0	0	1	0	0
I7	x	1	0	1	1	0
I8	0	0	1	0	0	0
		$I1 = \emptyset$	$I2 = 1$	$I3 = 1$	$I8 = \emptyset$	

Figure 8 -

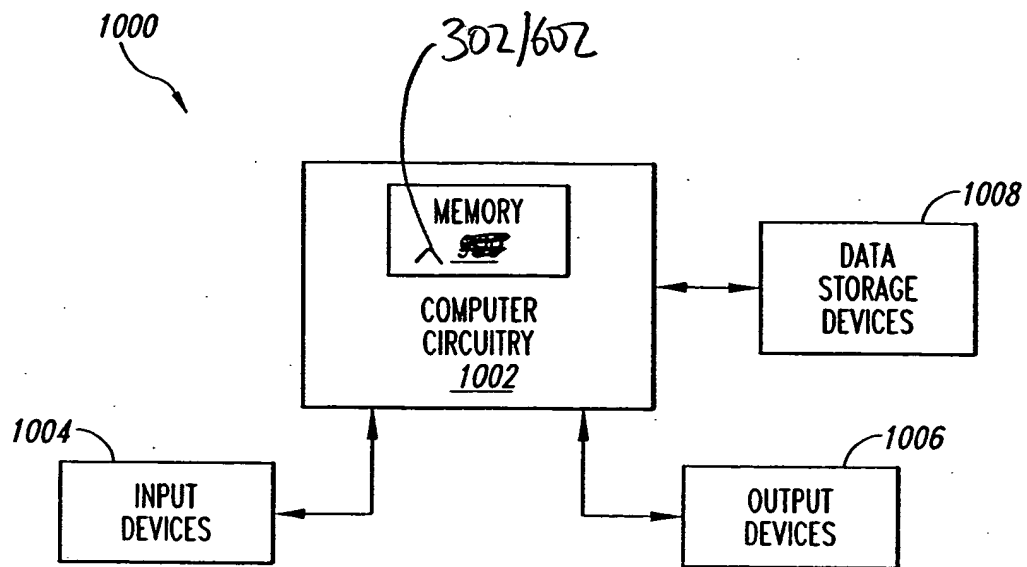


Fig.

9

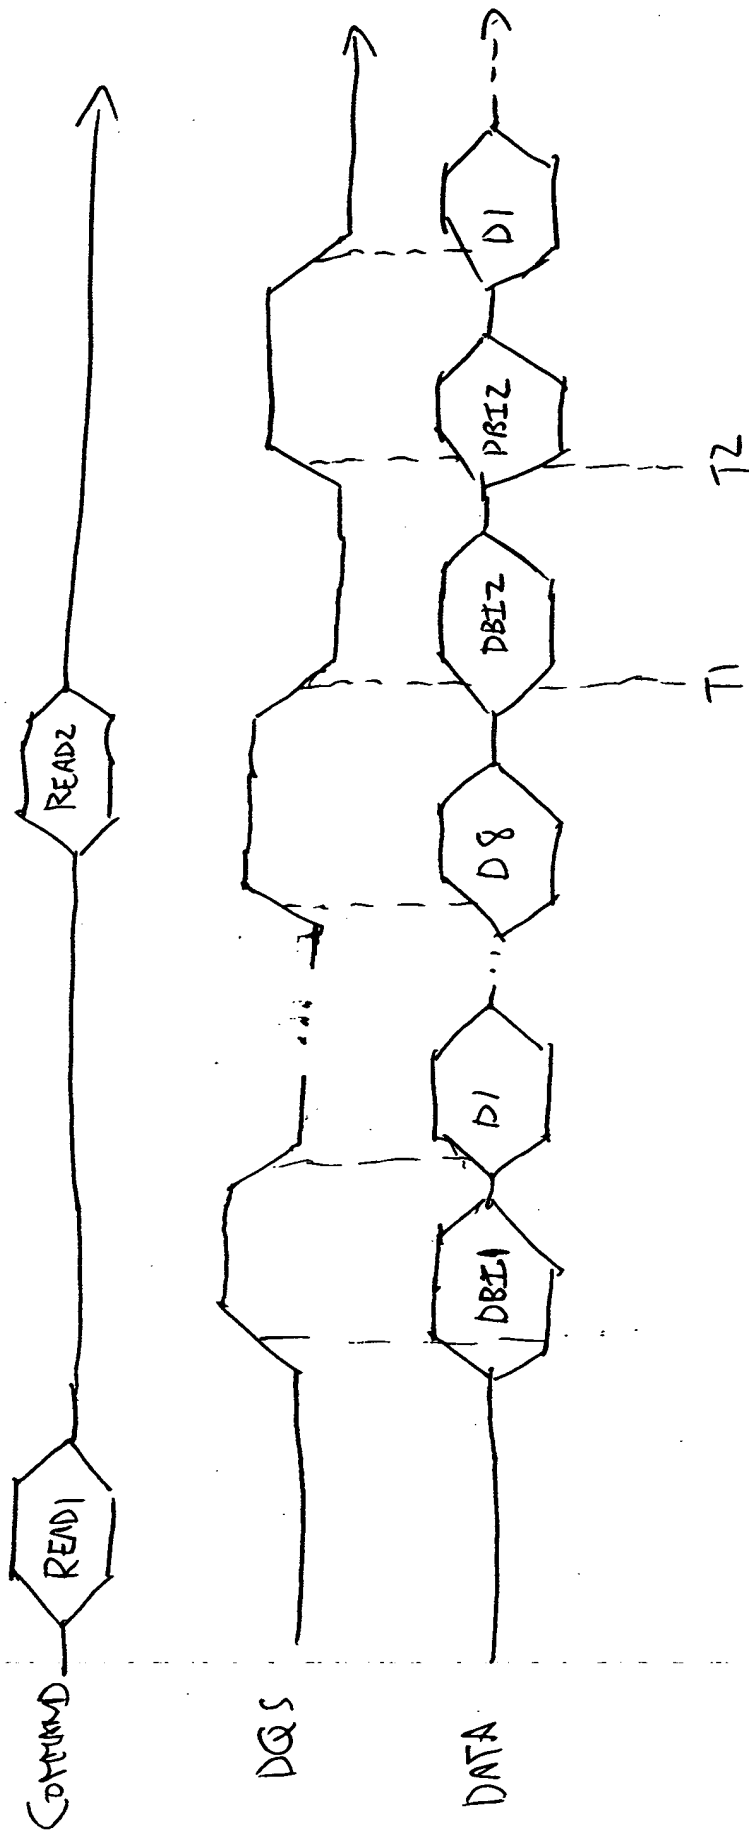


Figure 10